
SCAFFOLD ERECTION GUIDE



Hire Sales Installation

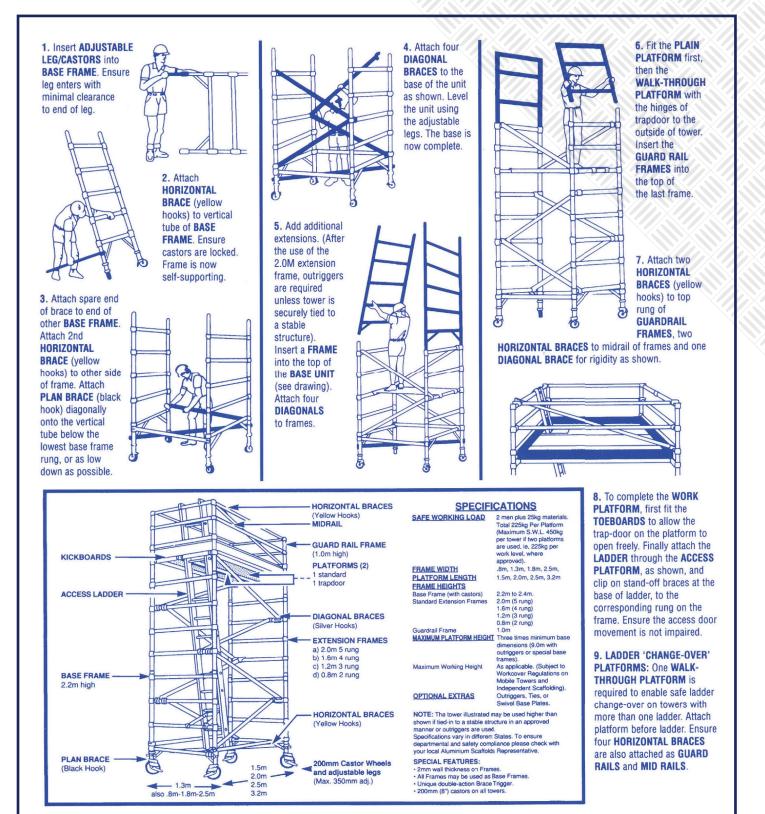

Towers in excess of 4 metres to be erected by qualified scaffolders

For erection and dismantle call **Melbourne**

Sydney 02 9648 4240 03 9315 5700

Brisbane 07 3710 6300 **Sunshine Coast** 07 5446 1644



Hire Sales Installation



What To Do:

- 1. Follow correct erection procedure.
- 2. Ensure no power wires or other obstructions impede erection.
- 3. Lock castor wheels before erection.
- 4. Level Scaffold at base before erection.
- 5. Ensure outriggers (stabilisers) are in place before erection over three times minimum base dimension (9.0m mobile, maximum height permissable)
- 6. Ensure all work levels and access levels have handrails and midrails.
- 7. Ensure access ladder is in place before accessing tower.

What Not To Do:

- 1. Erect scaffold over 4.0m in height unless you have certification
- 2. Erect scaffold within 4.9m of exposed power wires
- Load scaffold in excess of its rated safe working load = Max S.W.L. = 450kg (225kg per platform)
- 4. Move scaffold with any person(s) on the scaffold